

# DMX Control Modes

## EAsy-2 Mode

EASY-2 DMX mode		
CH	Value	Function
1	0-255	COLOR WHEEL (See Color Wheel Table)
2	0-255	MASTER DIMMER

## RGb-3 Mode

RGB-3 DMX mode		
CH	Value	Function
1	0-255	RED
2	0-255	GREEN
3	0-255	BLUE

## RGbU-4 Mode

RGBW-4 DMX mode		
CH	Value	Function
1	0-255	RED
2	0-255	GREEN
3	0-255	BLUE
4	0-255	WHITE

## tL1-5 Mode

TL1-5 DMX mode		
CH	Value	Function
1	0-255	MASTER DIMMER
2	0-255	RED
3	0-255	GREEN
4	0-255	BLUE
5	0-255	WHITE

# DMX Control Modes

## tL2-6 Mode

TL2-6 DMX mode		
CH	Value	Function
1	0-255	MASTER DIMMER
2	0-255	RED
3	0-255	GREEN
4	0-255	BLUE
5	0-255	WHITE
6	0-255	STROBE

## std-8 Mode

STD-8 DMX mode		
CH	Value	Function
1	0-255	Color Wheel (See Colorwheel Table)
2	0-255	RED
3	0-255	GREEN
4	0-255	BLUE
5	0-255	WHITE
6		SHUTTER
	0-15	Shutter closed
	16-47	Shutter pulse (random effects / slow to fast)
	48-79	Ramp up (random effects / slow to fast)
	80-111	Ramp down (random effects / slow to fast)
	112-143	Ramp up & down (random effects / slow to fast)
6	144-199	Strobe pause effect (slow to fast / 5s - 0.1s)
	200-239	Strobe effect (slow to fast / 1 Hz - 10 Hz)
	240-255	Shutter open
7	0-255	MASTER DIMMER
8	0-255	CTO